




# Rear Frame Stand

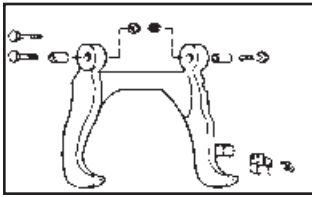


**1958-84 Big Twin Center Stand** features natural finish aluminum construction, with bushings and bolts. Replaces 49400-59A.

VT No.	Item
49-0928	Stand Complete
49-0234	Clip only
37-9306	Bushing Only



**Mounting Hardware** fits all models with rear stand.

VT No.	Year	Finish
8840-10	1930-35	Parkerized
8841-10	1936-37	Parkerized
8015-4	1938-57	Cadmium
9616-4	1938-57	Chrome

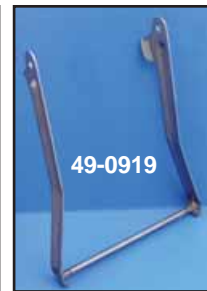

**Rear Frame Stands** for Rigid Big Twin. Order stand catch and mounting hardware separately. 49-0602 is of tubular shape material.

VT No.	OEM	Year	Model	Finish
49-0919	49500-36	1938-57	74 & 80	Raw
49-0953	49500-36	1938-57	BT	Black
49-0918	49500-36	1938-57	74 & 80	Chrome
49-0602	3051-36	1936&37	BT	Raw



**74 & 80 Stand Catch** for 1936-57. Replaces 49580-36.  
**31-0186** Parkerized  
**31-0480** Chrome

# Side Cover



**FLH Left Side Covers.** Covers left side and oil tank, brackets, knobs and hardware are included. **Note:** If rear footpegs are removed and footboards are used, you can use 42-9934 and 42-9935 side covers on the late models FLH.

VT No.	Years
42-9978	1965-69
42-9934	1970-77
42-9930	1978-81
42-9931	1982-84 Belt and Chain Drive

\*Note: Does not have hole in oil tank cover trim.




**Chrome Knurled Knobs** for attaching side cover or battery tops on FL models. Sold in pairs.

VT No.	Type
37-8873	5/16 x 18" Thread (L)
37-8874	5/16 x 18" Thread (S)
37-8875	3/8 x 24" Thread (S)



**FLH Right Side Covers** cover transmission area. Includes bracket and knobs included.

VT No.	#	Years
42-9938	C	1965-69
42-9935	A	1970-76
42-9929	B	1977only
42-9932		1978-84

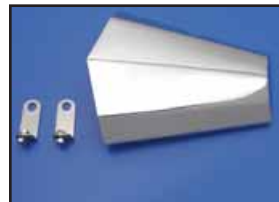

**Chrome Engine Air Scoop** will force air to rear cylinder. Mounts to left side of Big Twin Shovel 1966-84. Brackets are included.

VT No.	Item
42-0317	Kit
31-1025	Brackets



**Chrome Dress Up Balls** are sold as pairs for decoration in sizes listed.

VT No.	Type
37-8150	1/2 x 20
37-8151	3/8 x 24
37-8152	5/16 x 24