





Footboard Set

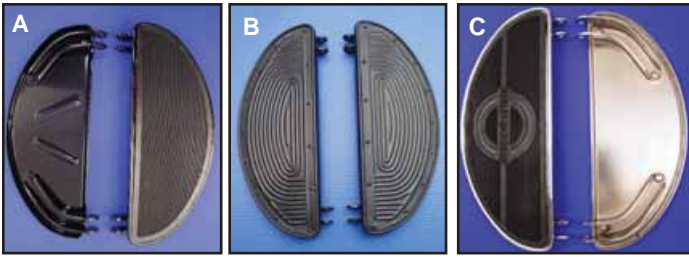

Oval Style Shape Footboards fit the stock mounting brackets on 1940-84 FL and 1940-65 45 models. Footboards replaces 50603-40.

| VT No. | # | Finish Note | Year |
|---------|---|----------------------------|---------|
| 27-0907 | A | Black Rubber Mats | 1940-65 |
| 27-0908 | A | Chrome Rubber Mats | 1940-84 |
| 27-0884 | | Chrome Rubber Mats | 1940-84 |
| 27-0915 | B | Black Metal top | 1940-45 |
| 27-0900 | C | Chrome Rubber H-D Logo Mat | 1940-65 |
| 27-0916 | D | Black H-D Logo Mats | 1940-65 |

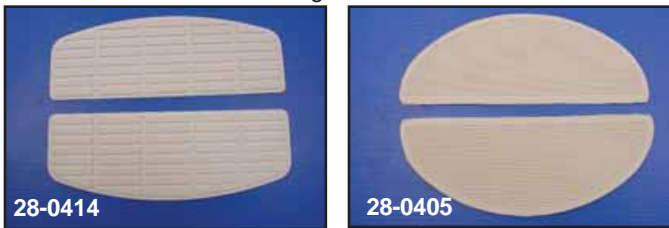

Footboard Mats sold in pairs. Must be affixed by adhesive or rivets, on earlier models.

| VT No. | # | Year | Color |
|---------|---|---------|------------------|
| 28-0413 | A | 1966-up | Black |
| 28-0414 | A | 1966-up | White |
| 28-0429 | A | 1966-up | Teal |
| 28-0430 | A | 1966-up | Orange |
| 28-0431 | A | 1966-up | Blue |
| 28-0432 | A | 1966-up | Yellow |
| 28-0404 | B | 1940-65 | Black, H-D |
| 28-0858 | B | 1940-65 | Black, H-D |
| 28-0405 | B | 1940-65 | White, Plain |
| 28-0672 | B | 1940-65 | Black, Plain |
| 27-0597 | | 1914-65 | Rivets, 28 piece |



Chrome 'D' Shaped Footboards include rubber pads. The Iso boards feature a raised footboard pad with anti-vibration rubbers. Sold in pairs.

| VT No. | Year/Model | Type |
|---------|------------|-------------------|
| 27-0904 | 1966-73 FL | Solid/Set |
| 27-0903 | 1966-85 FL | Iso/Set |
| 27-0918 | 1966-85 FL | Kit with brackets |



Upper Footboard Plate for 1974-91. Includes 8 Iso-Buds with 2 upper plates and rubber mats, 1992-up has Iso-Buds molded in for updated design.

| VT No. | OEM | Fits | U/M |
|----------|-----------|------------------|------|
| 27-1574 | 50619-74A | 1974-91 FL-FLT | Pair |
| 27-1666* | 50614-91 | 1992-up FLST-FLT | Each |

*Note: Can be used on all 1974-up type Iso footboards.

Iso Inset Floorboard Set fits 1936-84 FL.
VT No. 27-0922



Vintage Footboard Sets feature classic oval design with "shaker" Iso-mount cushion area. Black pads included.

| VT No. | Fits |
|---------|---------------------------|
| 27-0912 | 1940-84 FLH (No Bullseye) |
| 27-0927 | 1940-84 (Bullseye) |

1914 Early Square Type Footboards fit all 1914-39 models. Replaces 2938-14. Available chrome or raw without rubbers.

| VT No. | Item |
|---------|--------------|
| 27-0901 | Raw |
| 27-0902 | Chrome |
| 9886-12 | Mount Screws |

