




# Sidecar Parts

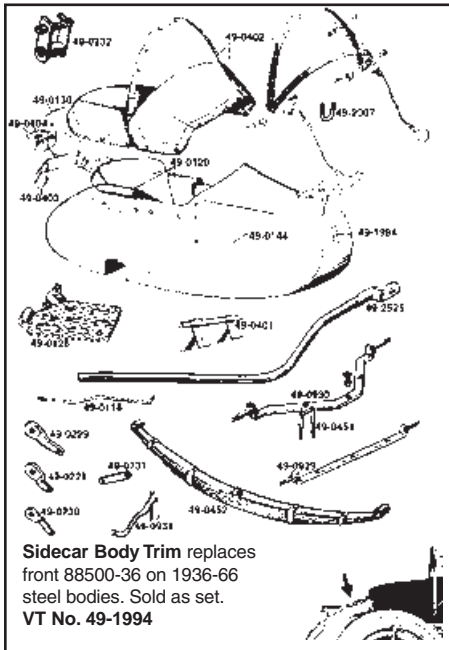

Sidecar Body Trim replaces front 88500-36 on 1936-66 steel bodies. Sold as set.  
VT No. 49-1994



### 1936-65 Sidecar Body and Accessories

VT No.	OEM	Item
49-1001	88366-36	Metal Body Only
49-0120	4pc	Upholstery Complete
49-1994	88500-36	Nose-Tail Trim Complete
	88502-36	
49-0144	88504-36	Side Trim, 4 Piece
49-0401	88560-36	Foot Rest Bar
49-0402	88850-36	Windshield Complete
49-0403	89130-36	Wheel Bracket
49-0404	89200-36	Wheel Handle
49-0118	87732-41	Brake Rod
49-0128	88575-45	Iron Step
49-0788	87750-58	Side Car Wheel Cylinder with inverted flare fits 1958-79 Side Car Brake

2663-7 1940-46 Step U Mount Bolts  
2661-7 1947-64 Step U Mount Bolts



Replica Sidecar Fender Lamp fits 1934-65 models.  
VT No. 33-0406

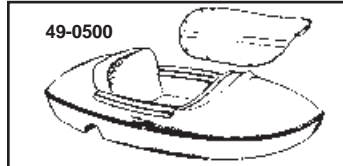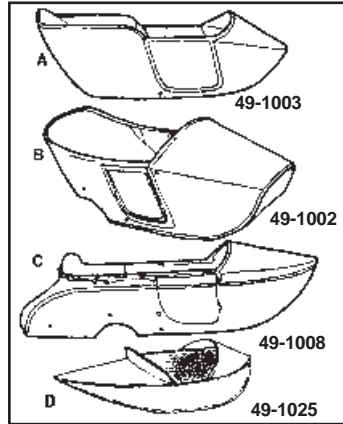


Metal Sidecar Bodies are reproduced as original with doors that open, stock seams and rivets. Upholstery not included.

VT No.	#	Year	Model
49-1003	A	1915-17	JD with door
49-1002	B	1918-24	JD with door
49-1025	D	1915-35	Torpedo Racer
49-1008*	C	1929-52	45 Solo
49-1004	C	1924-35	VL

\*Note: Smaller than VL type without opening door.  
Accessories for 1967-up.

VT No.	OEM Item	Item
49-0500	88366-36A	Fiberglass Body
33-0402	59260-68	Fender Lamp

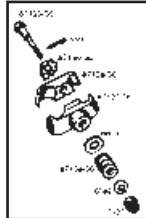


Upper Connection Parts are available separately for 1936-up Sidecar.

VT No.	OEM	Item
49-1995	87127-36	Clamp
	87128-36	
49-1979	87135-36	Bolt
13-0220	87138-36	Spring
49-2531	87136-36	Lock tab, 5 pk



### Sidecar Brake Drum and Shoes.

VT No.	OEM	Item	Year
23-1993	44402-36	Shoes	1936-57
23-1770	44133-36	Drum	1936-57
23-0501	41801-58A	Shoes	1958-79
49-0788	87750-58	Wheel Cylinder	1958-79

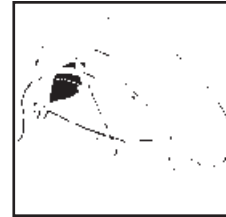

Sidecar Fender replaces 87900-34 assembled with brackets for 1936-E67 Sidecars with primer finish. Stainless trim with clips, available separately.

VT No.	Item
50-0773	Fender w/Braces
49-0405	Trim



Sidecar Connector Kit comes complete with upper, front and lower for the years listed for 74" & 80" Big Twins.


VT No.	OEM	Fits
49-1990	87082-36	1937-57 Rigid
49-1991	87082-58	1958-72 SA
49-1992	87082-73	1973-79 S
49-1993	87106-79	1980-84

Clamp Bracket Set includes 87205-58, 87206-58 with 4 U-Bolts as pictured.


VT No.	Item
49-1989	Set
21-0315	U-Bolt, ea



# Sidecar Parts




Sidecar Wrenches are heavy duty for shop use. Replaces 27011-36, 1 7/8".  
VT No. 16-0111

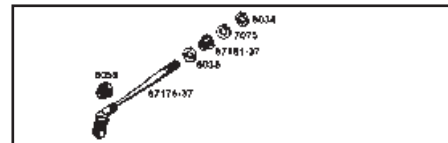


Sidecar Mounting Fittings are precision machined fittings that are replicas of the original.

VT No.	OEM	Application
49-1945	87176-37	Front tie rod
49-1977	87254-24	Ball stud
49-1979	87135-36	Upper conn. bolt
49-1980	87265-24	Ball joint nut
49-1981	87197-36	R frame mount 36-57
49-0134	87267-24	Ball joint locknut
49-0131	87444-33	Axle spindle nut
49-1947	87181-37	Tie Rod Spacer
49-1949	8034	Tie Rod Outer Nut
49-1950	8038	Rod End Nut
49-1948	8059	Tie Rod Nut
49-1996	—	Threaded Ball Socket

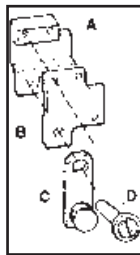

### Rear Clamp Connector

VT No.	#	OEM
49-1986	A	87083-87
	B	87084-73
49-1984	C	87197-73
49-0135	D	87192-73




### Sidecar Axle Hardware for 1936-65.

VT No.	OEM	Item
49-0132	87438-30	Axle Nut & Extension
49-0131	87444-33	Nut
49-0133	88010-36	Axle/Fender Bracket




Sidecar Support Rod Bushing and Stud Kit.  
VT No. 2433-18



### Rear Connector.

VT No.	OEM	Item	Type
49-1981	87197-36	Mount only	36-57 Rigid
49-1983	87197-58	Mount only	58-72 SA
49-1984	87197-73	Mount only	73-79 SA
49-0154	87192-58	Stud only	1958-72
49-0135	87192-73	Stud only	1973-80

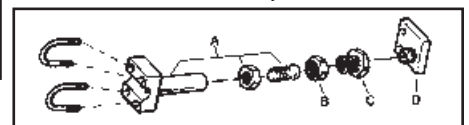

Clamp On Rear Mount for mounting side cars on 1979-84 Classic & FLH models.

VT No.	#	OEM	Item
49-1988	A	87106-79	Connection Fitting
49-0134	B	87265-24	Joint Lock Nut
49-1980	C	87265-24	Joint Nut
49-1987	D	87195-79	Mount Block